

ADDENDUM to On Air WEM-1 Owner's Manual

The following items may appear in early copies of the JBL On Air WEM-1 Owner's Manual and require an explanation or correction:

- Page 4 figure 2, it may show an unlikely mismatch on the customer's left and right speaker terminals, and the wrong color for the positive terminal on the left speaker.
- Page 4 figure 3, it may show an incorrect polarity connection for the left channel. Positive should always be connected to Positive, and Negative to Negative on this product.
- Page 7 remote control battery replacement section, it calls for a battery type of CR2032. But battery included and recommended for the WEM-1 remote is type CR2025.
- Page 6 chart of proper LED indicator colors, although accurate, the last three entries refer to the WEM-1 receiver/amplifier used with Local Input jack, and may seem to contradict previous entries in the chart. A more easily understood version of the chart appears below.

Normal Operation (Input on Transmitter used)

LED Color	Transmitter Module	Receiver Module
Green	Transmitter and receiver module are communicating (RF lock)	Transmitter and receiver module are communicating (RF lock)
Blinking Green (Slow)	Transmitter and receiver are not communicating (no RF lock)	Transmitter and receiver are not communicating (no RF lock)
Blinking Green (Fast)	Not applicable	Receiving IR command from remote control *
Red	Standby (no signal being received)	Standby (no signal being received)

Local input Used on Receiver

LED Color	Transmitter Module	Receiver Module
Orange	Not applicable	Local input is selected
Blinking Orange (Slow)	Not applicable	System muted
Blinking Orange (Fast)	Not applicable	Receiving IR command from remote control *

* Blinking stops when unit reaches minimum or maximum volume setting